Instant Pot Cover

Instant Pot IP-Lux

by Kelly Nagel

Original Design for
Sulky of America

sulky
Create with Confidence

Project Overview

Fabric:

- 1 yard of fabric

Thread:

- **Sulky Poly Deco™** Thread for construction & embroidery (optional)

Supplies:

- 1 yard pack of Sulky **Fuse 'n Stitch™**

Cut Fabric & Fuse 'n Stitch:

CUT:

- 13.75" x 41" Rectangle
- 13.5" Diameter Circle
- 2.25" x WOF strip for binding (Fabric only)
- 3" x 7" strip of fabric only (For optional handle)
- 1" x 6" strip of Fuse 'n Stitch only (For optional handle)

Instructions

Step 1

Cut the fabric & stabilizer pieces (except the circles).

To cut the circles:
Divide the diameter in half (The featured diameter is 13.5” so half is 6.75”).

Instructions - continued

Step 2

Fold the fabric into fourths making sure you have at least 6.75” from the fold to the edge.

Step 3

Use a tape measure to mark 6.75” from the center.

Step 4

Keep marking the measurement until you have marked the entire fourth of a circle.

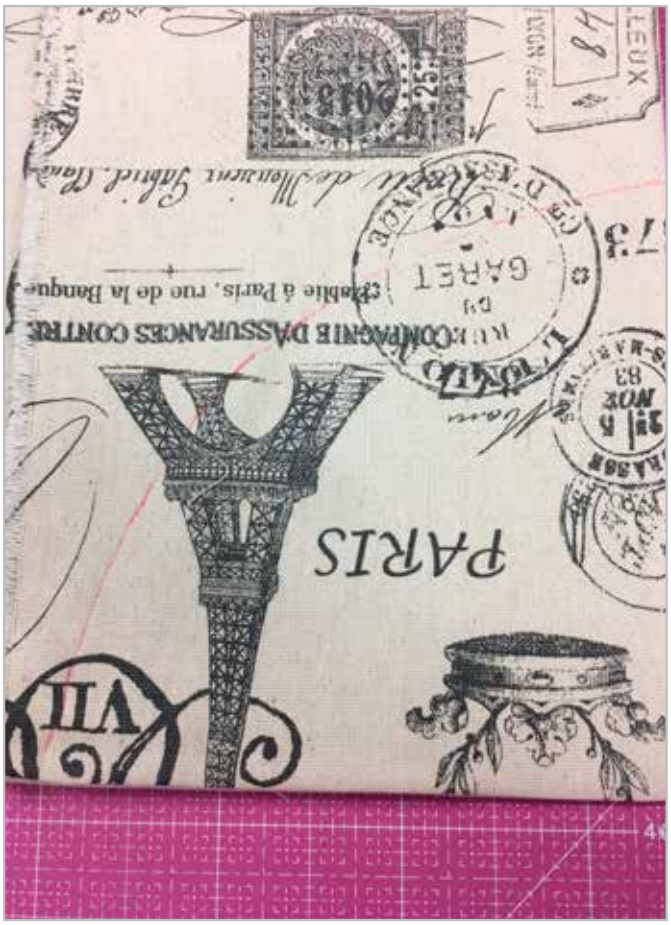

Step 5

Cut along the line.

Step 6

Unfold to reveal a 13.5” diameter circle.
Repeat to cut the Sulky Fuse ’n Stitch circles.

Step 7

Fuse the 13.75” x 41” fabric and Fuse ’n Stitch together following the Fuse ’n Stitch directions. Add optional machine embroidery to the rectangle.

Sew rectangle together (RST) on the short edge with a ½” seam allowance. Serge-finish the seam or set a standard machine to an overlock stitch.

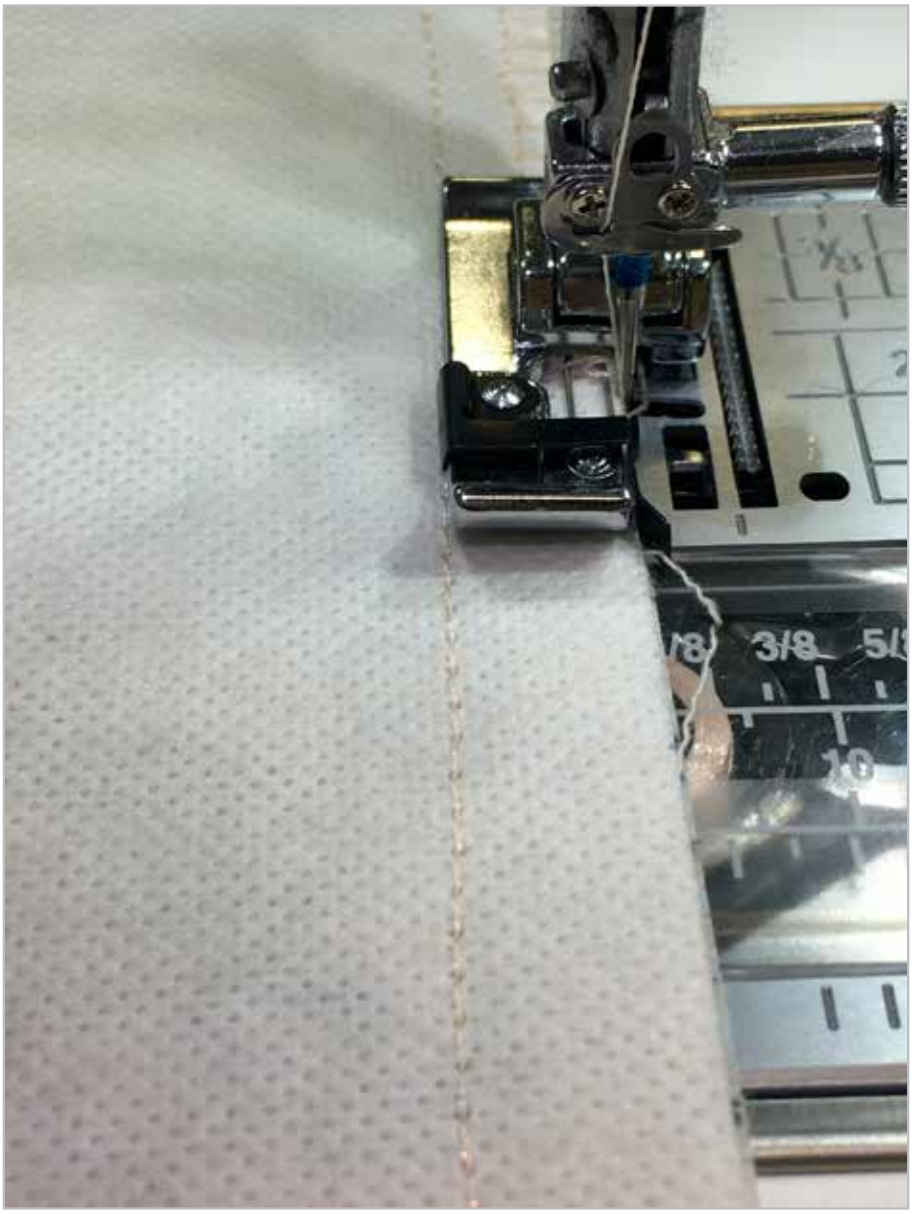

Step 8

Fuse the circle fabric to the circle Fuse ’n Stitch.

Step 9

Add an optional handle to the circle outer edge.
Fuse the 1” x 6” piece of Fuse ’n Stitch to the center of the 3” x 7” fabric strip.

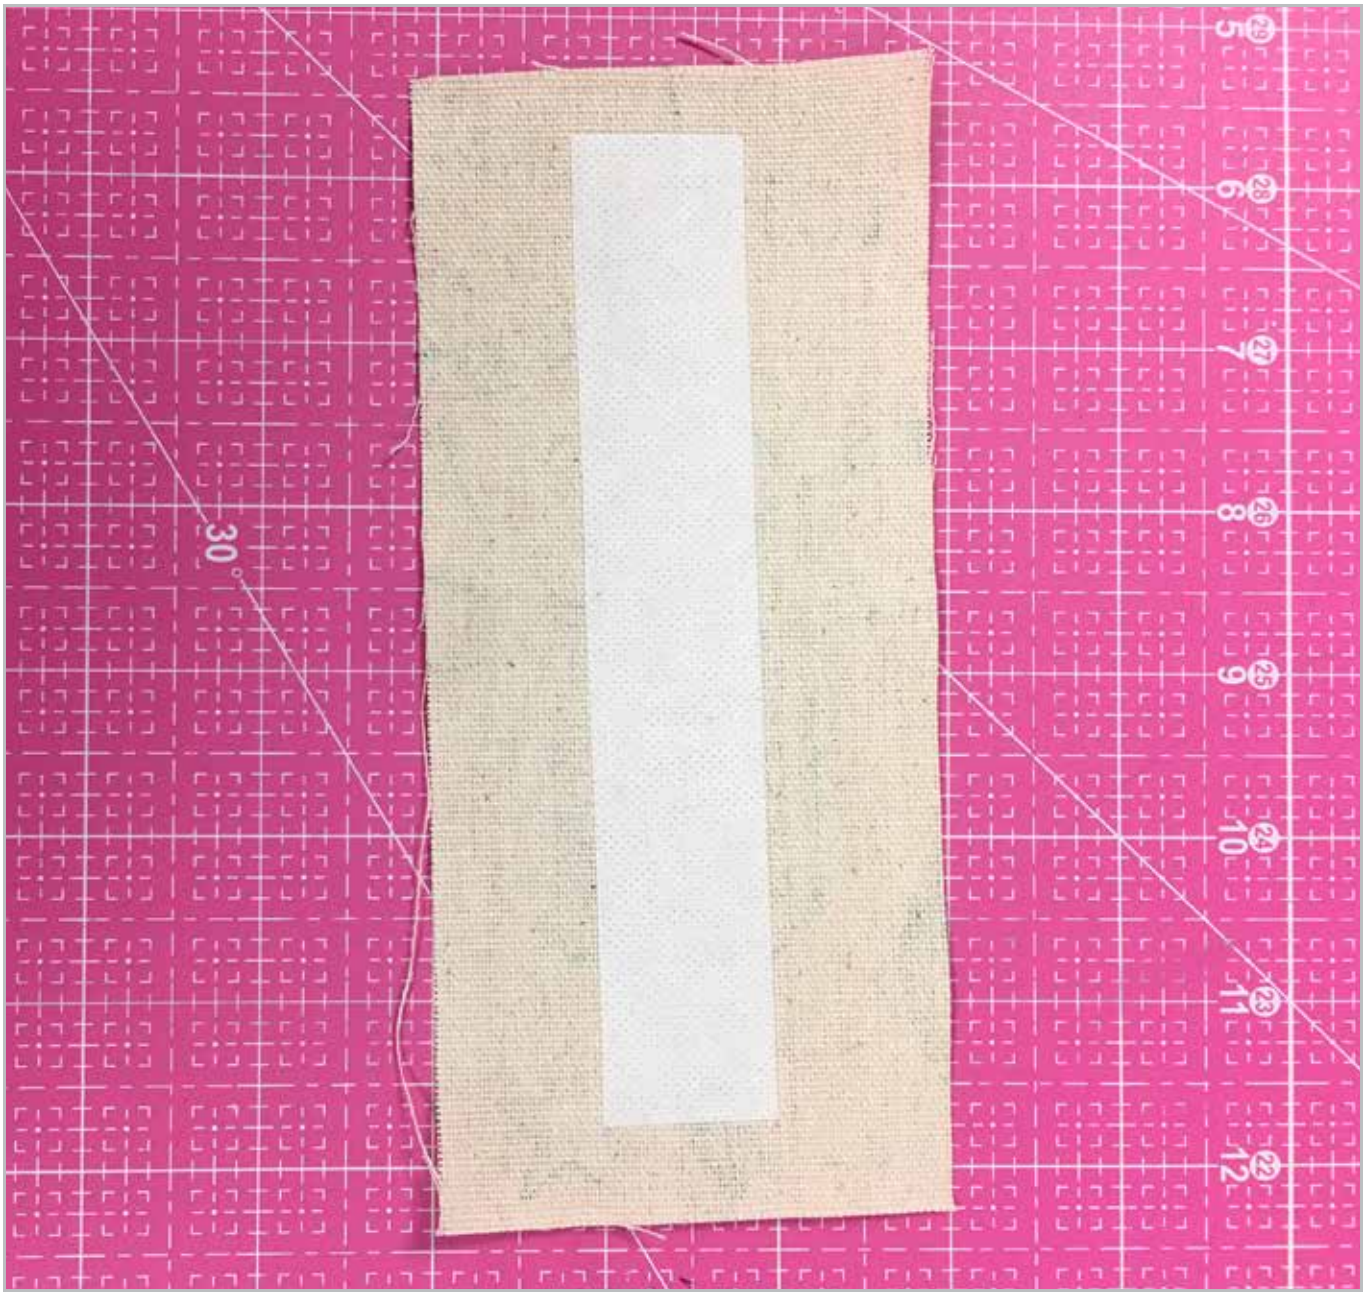

Step 10

Fold and press a ⅛” seam allowance down on the two short edges and one long edge (WST). Topstitch the seams.

Instructions - continued

Step 11

Fold the raw edge along the long side 1” toward the wrong side & press. (Wrong side of fabric to the Fuse ’n Stitch).

Step 12

Fold the finished long side over the raw edge side & press.
Topstitch ¼” from each side.

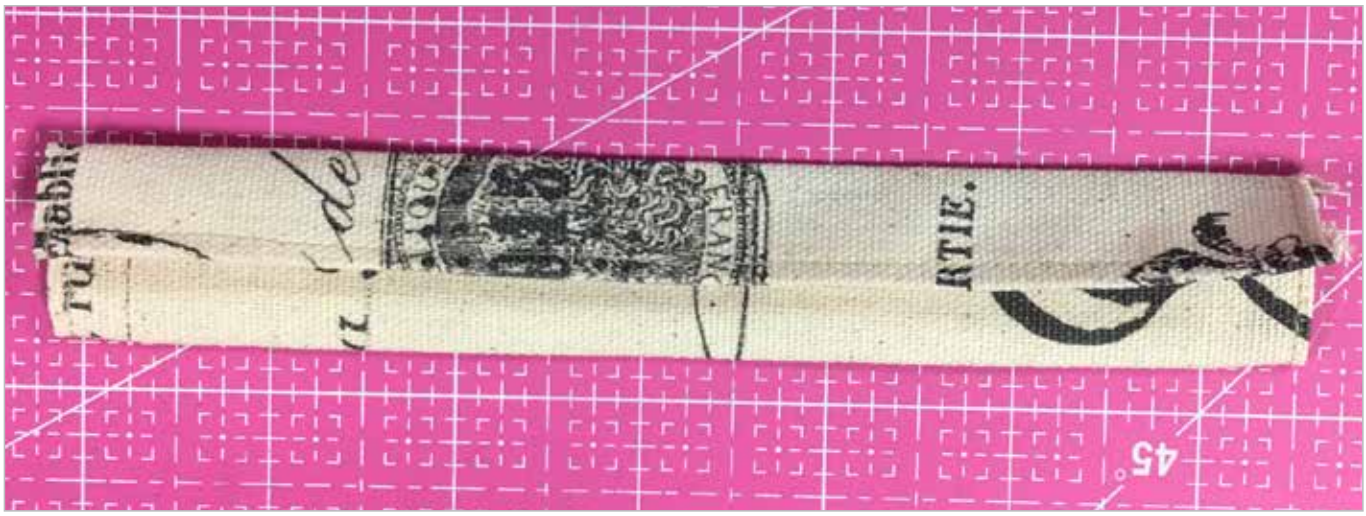

Step 13

Mark the center of the circle top.

Step 14

Topstitch the handle 2” beyond the center mark on each side.

Note:

the Handle will be up a little from the fabric, not flat.

Step 15

Sew the circle to the rectangle upper edge using a ½” seam allowance and serge or overlock the seam allowance.

Step 16 - continued

Step 17 - continued

Step 18

Bind the lower edge.

Step 19

Insert the Instant Pot into the cover.